

It's like having your own drummer.

Superb Drum and Bass Sounds

Take a listen to the DR-3 and you'll be surprised at how amazing this affordable little box can sound. With 120 of BOSS' best drum and percussion sounds, you'll have a wide variety of acoustic and electronic kits perfect for any style. There are also 12 onboard bass sounds, making it easy to add bass to any arrangement. And with 13 velocity-sensitive pads, you can program more dynamic and expressive patterns.

New Rhythm Progressions

If you need pro-quality drums fast, you'll love the DR-3's Rhythm Progressions. Simply choose from 100 Preset Styles and use the eight panel buttons to select a different pattern for each section of your song: Intro, Verse, Fill or Ending with three variations each. The DR-3's Preset Styles cover a diverse range of musical genres, so you can grab a pattern and go. Or create up to 100 User Styles via realtime or step recording.

Preset Style List (Total: 100 styles)

ROCK JAM	x 2	GROOVE CUT		FUNK	x 6	DRM'N'BSS	x 2
SHFFL JAM		AC ROCK		SOUL	x 2	TECHNO	x 2
ROCK HOP		ELEC ROCK	x 2	NEW R&B		HOUSE	x 2
STREET HOP		SURF ROCK		HIP HOP	x 3	BOSSA JAM	
MIAMI		8TH FEEL	x 4	FUSION	x 4	BOSSA NOVA	
FUNK ROCK		16TH FEEL	x 3	GROOVE SIX		SAMBA	x 3
HARD ROCK	x 6	SHUFFLE		HEAVY FUNK		SALSA	x 2
HVY ROCK	x 3	BALLAD	x 4	GOSPEL	x 2	LATIN JAM	
FAST ROCK	x 3	COUNTRY	x 2	MED BLUES		LATIN POP	x 2
ROCK SWING		BLUE GRASS		SWING	x 2	REGGAE	
ROCK	x 8	BLUES	x 2	BRUSH			
TRIBE ROCK		CHICAGO		BIG BAND			
JELLY JAM		ROCK BLUES		JAZZ WALTZ			
KNCKL HEAD		LATIN ROCK		JAZZ FIVE			



Total Sound Control 1050

BOSS' new TSC (Total Sound Control) makes it easy to change the overall sound of a drum kit. The Sound Shape function offers 3-band compression and 3-band parametric EQ—complete with eight presets like "Loud," "Tight" and "Enhance" and eight User settings. A built-in Ambience effect lets you can add spaciousness and depth with control over parameters like pre-delay, density, early reflections and more. Never before has a drum machine been this powerful and easy to use!

Playing along with Rhythm Progressions is as easy as 1-2-3!



Use the Value dial to select the style of pattern you want.



Push the Intro/Start button.
After the intro,
your pattern begins.



To create a fill-in, simply press FILL B at the appropriate time.



Now you're jamming! To get a different fill, simply press FILL C.



By connecting two optional footswitches, you can control the DR-3's Rhythm Progressions hands-free —great for

REAR VIEW



OPTIONS

PSA Series



PCS-31
Foot Switch Cable Roland®
(Stereo 1/4" ← Mono 1/4" x 2)

SPECIFICATIONS -

• Styles User Style: 100 styles, Preset Style: 100 styles * 11 patterns for a style • Songs User Song: 100, Song Length: Max. 250 patterns for a song • TSC (Total Sound Control) < Sound Shape> Preset Patch: 8, User Patch: 8, < Ambience> Preset Patch: 8, User Patch: 8 • Max. Polyphony 12 voices • Instrument Drum and Percussion: 120, Bass: 12 • Resolution 96 per quarter note • Tempo 20-260 bpm • Recording Method Realtime / Step • Pads 13 (Velocity-sensitive) • Display Backlit LCD (16 Characters x 2 Lines) • Connectors Output: L, R (RCA phono type), L (PHONES), R (MONO) (1/4" phone type), Foot Switch (Stereo 1/4" phone type), MIDI IN, DC IN (AC Adaptor Jack) • Power Supply DC 9 V: Dry Battery (LR6 (AA) type) x 6, AC Adapter: PSA Series • Power Consumption 200 mA • Expected battery life under continuous use: Alkaline: approx. 5 hours (This figure will vary depending on the actual conditions of use.) • Dimensions 213 (W) x 185 (D) x 53 (H) mm (8-7/16 x 7-5/16 x 2-1/8 inches) • Weight (excl. dry batteries) 710 g (1 lb 10 oz) • Accessories Alkaline Dry Battery (LR6 (AA) type) x 6, Owner's Manual • For your convenience, the DR-3 runs on AC or battery power.



All specifications and appearances are subject to change.